

SAFETYTRIM 500

Safety knives for all industries

Disposable Blade

Please handle all knives with care


Multi-Use Handle

Use care when removing blade


Pull blade out

Sensitive, Flexible, Guarded for trimming Light Flash on moulded plastics and laminates

Push button to release blade

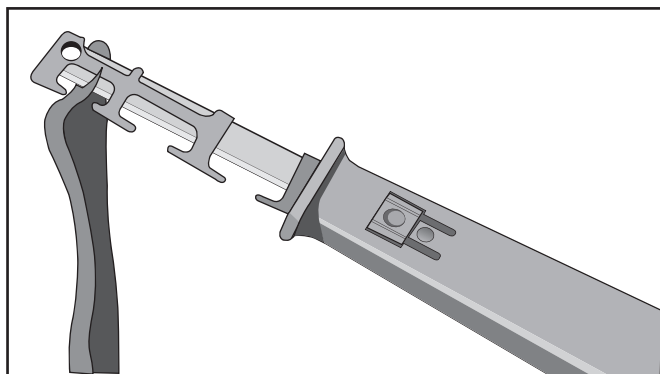

Blunt edges for smoothing

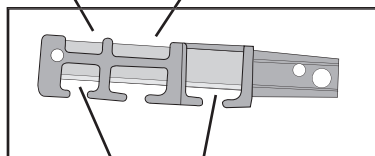

Blade edge

- Blade exactly same material and thickness as scalpel blade
- Flexible for delicate trimming
- Finger safe (based on British Standard Finger of 5mm)
- To release blade, push button and pull blade away from handle. If blade is resistant, place tip of pen into small hole at top of blade, and gently pull blade out.
- Blade may be inserted for right or left hand use



The Safety Knife Company

755 Old Frontenac Square • Saint Louis, MO 63131

Tel: 314•645•3900 • Fax: 314•645•0728

E-mail: sales@safetyknife.us.com

Web: www.safetyknifeus.com